



# D-PRO ACTION


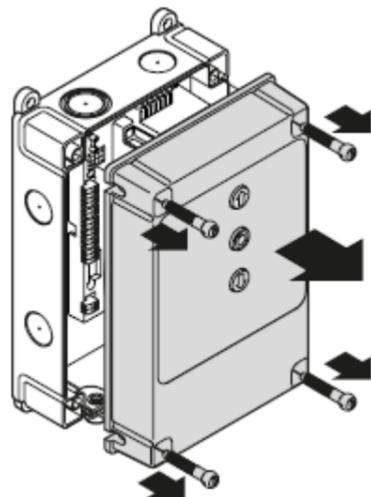


# SW

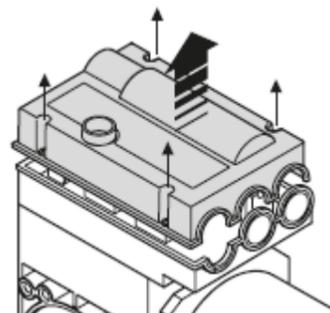

IS0506A00MM\_29-09-2016


ОДНА ФАЗА ~ 230 В

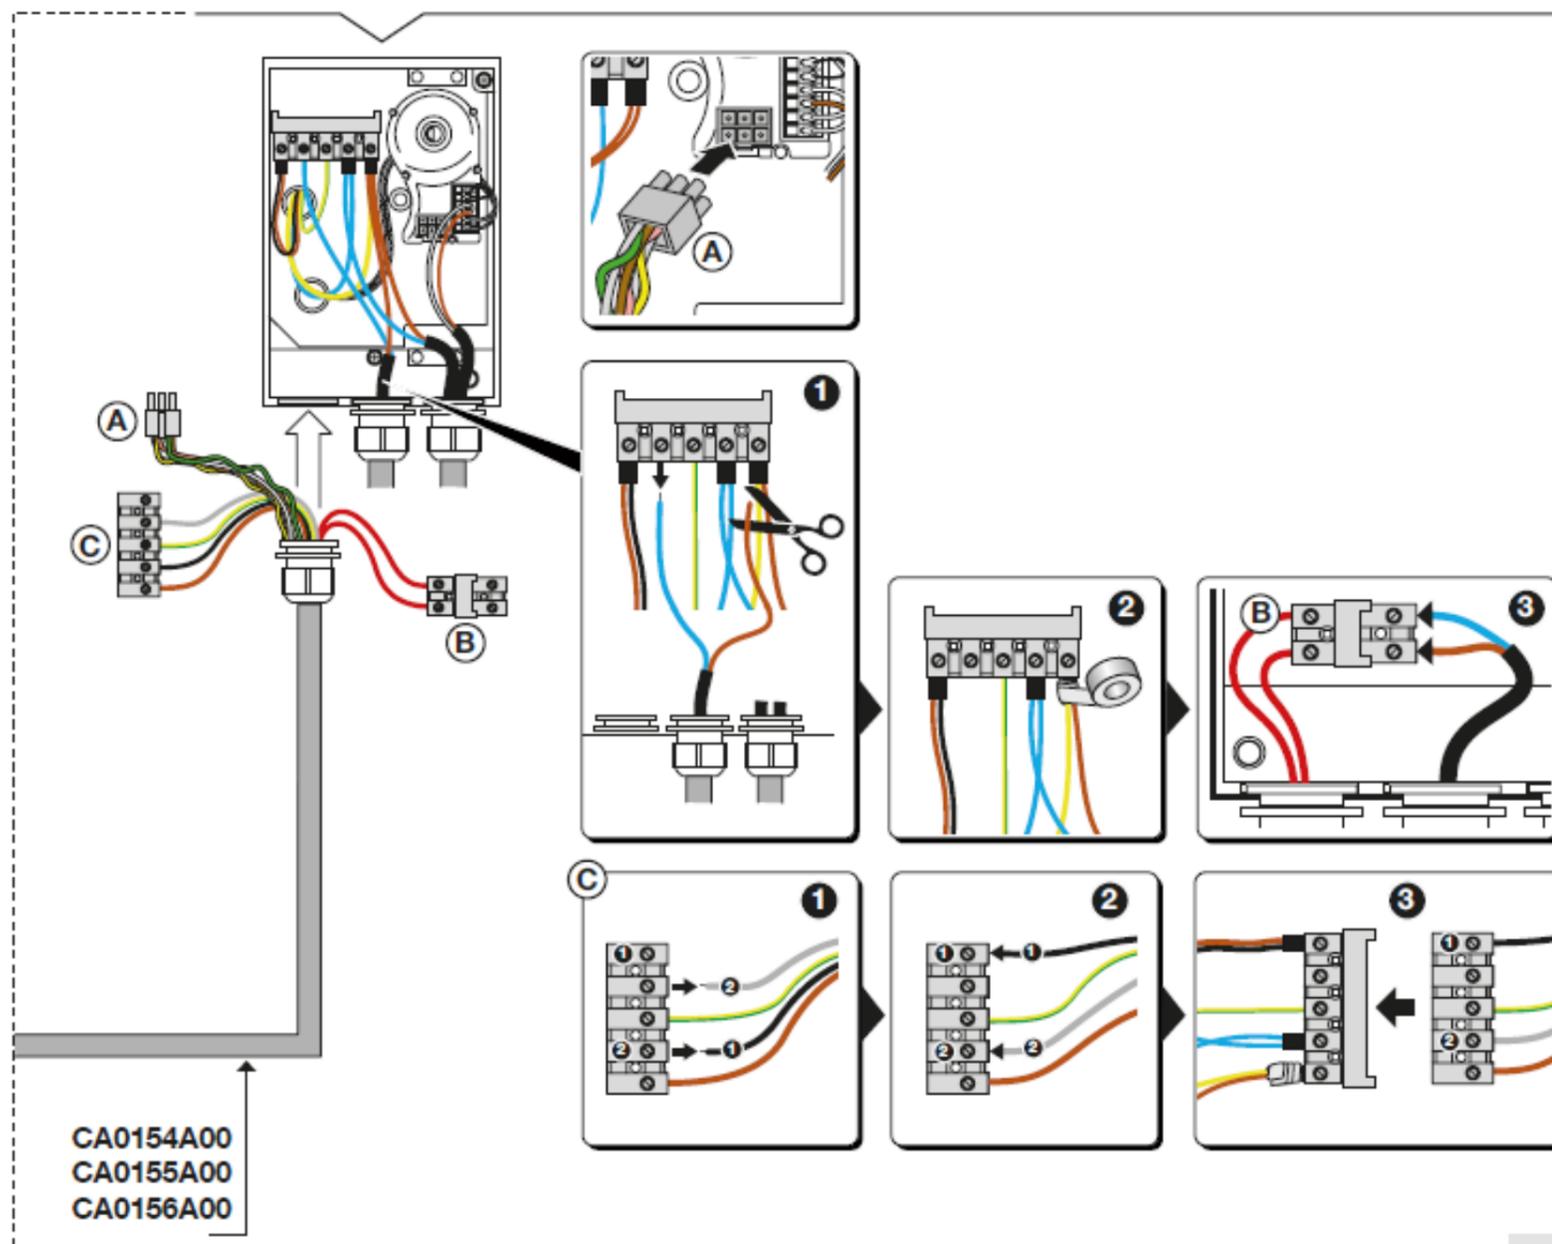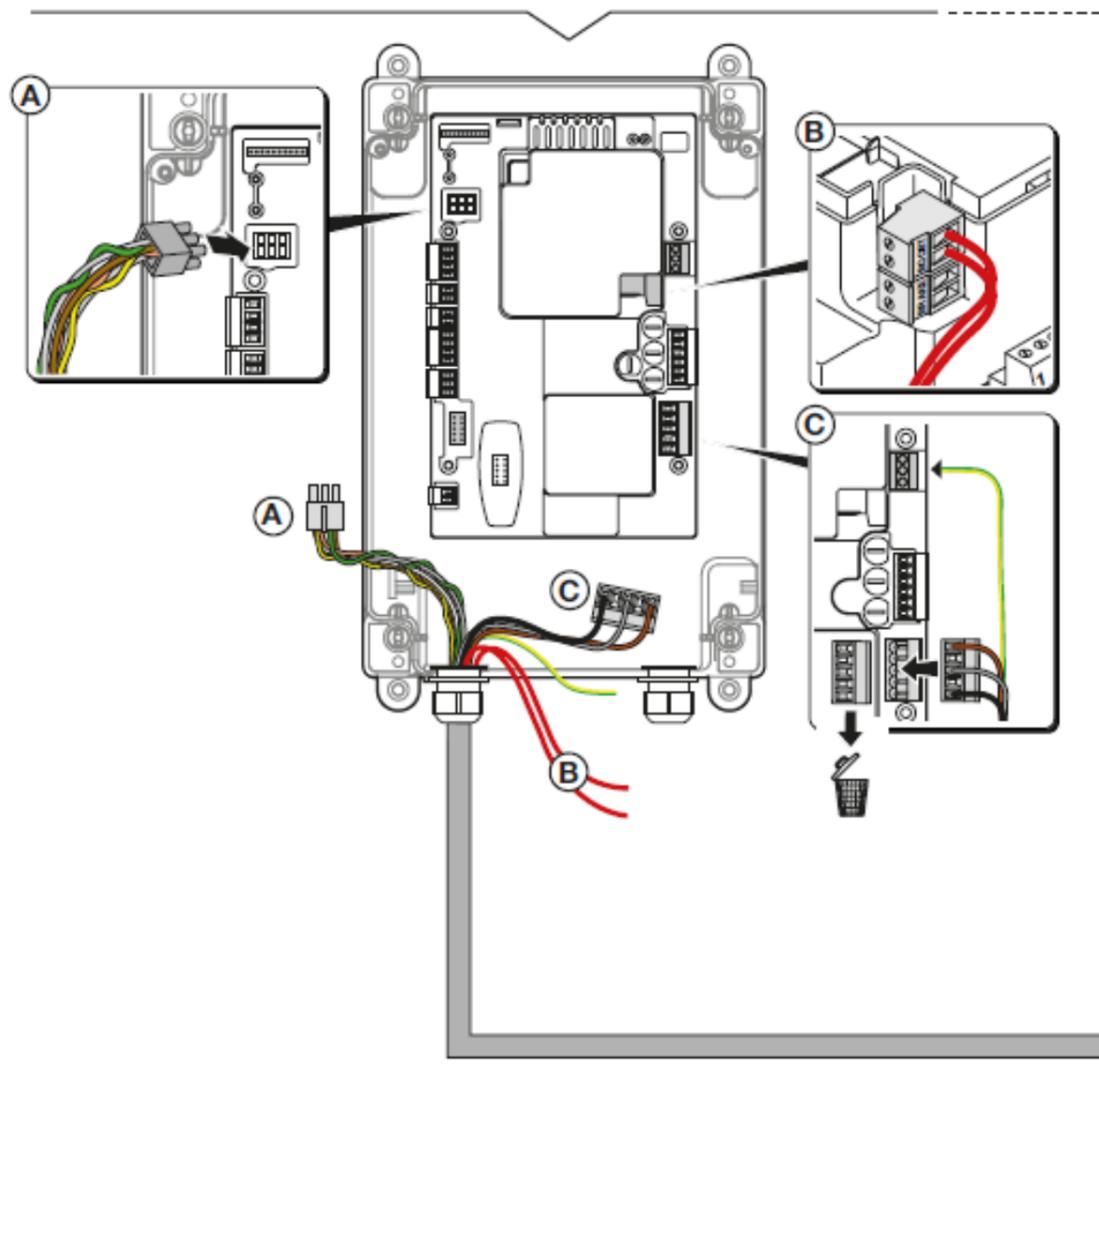






IS0506A00MM\_29-09-2016

### D-PRO ACTION

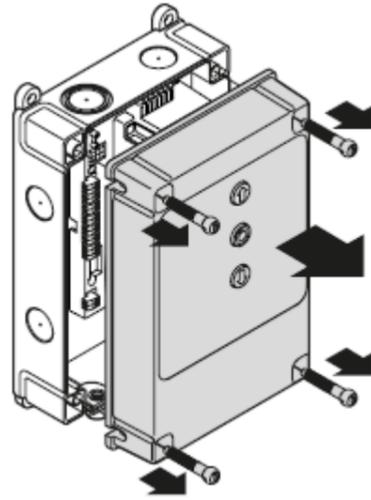


ТРИ ФАЗЫ  $3 \sim 400 \text{ В}$   
 $3 \sim 230 \text{ В}$


### SD – RD – RDF - HDF

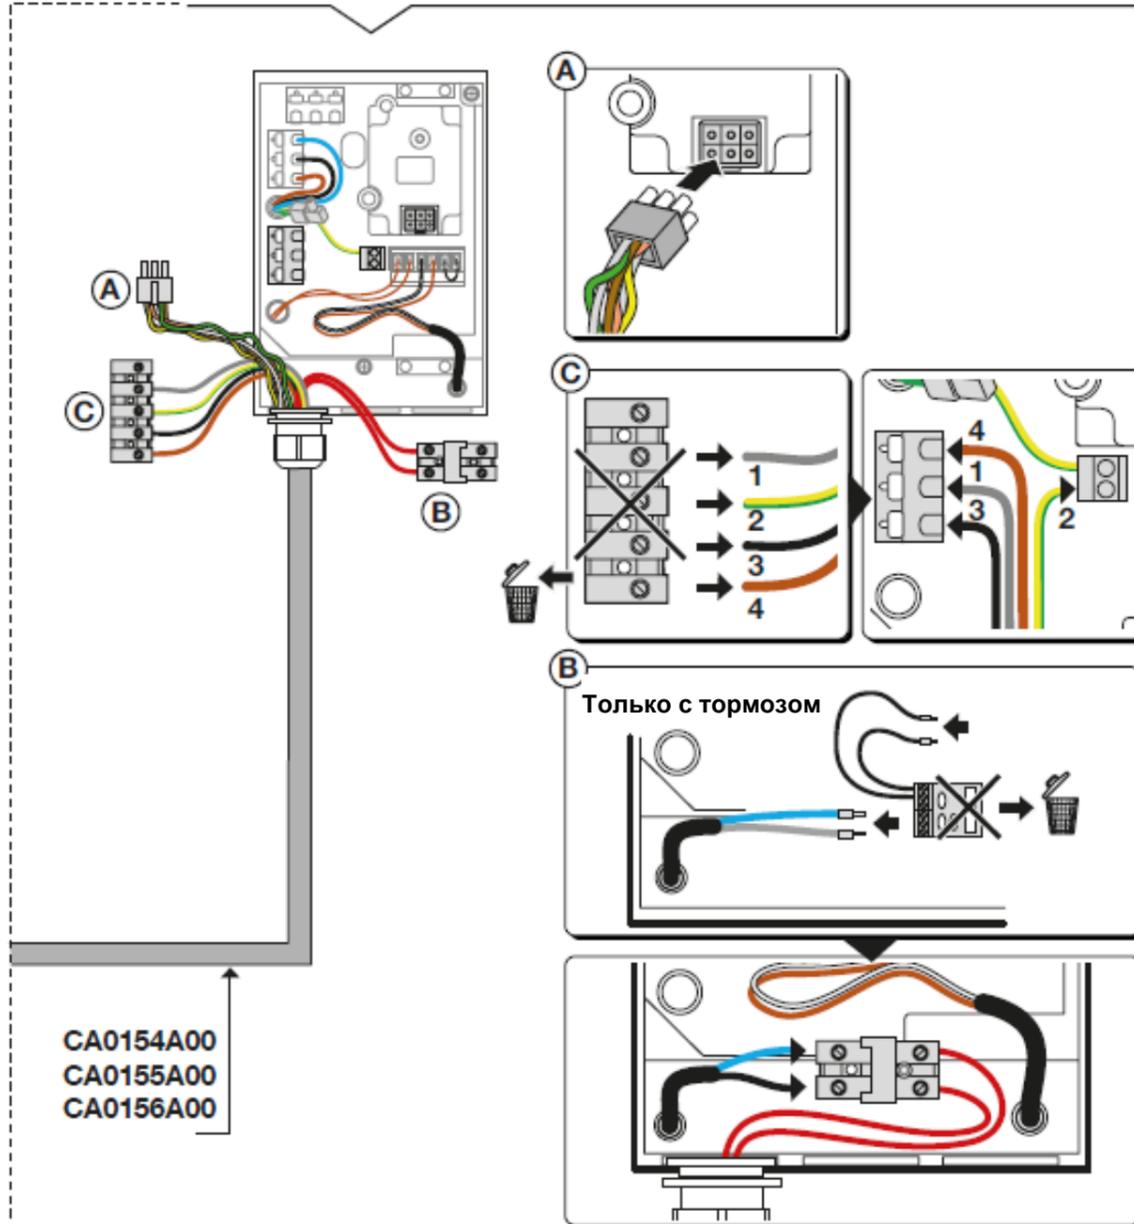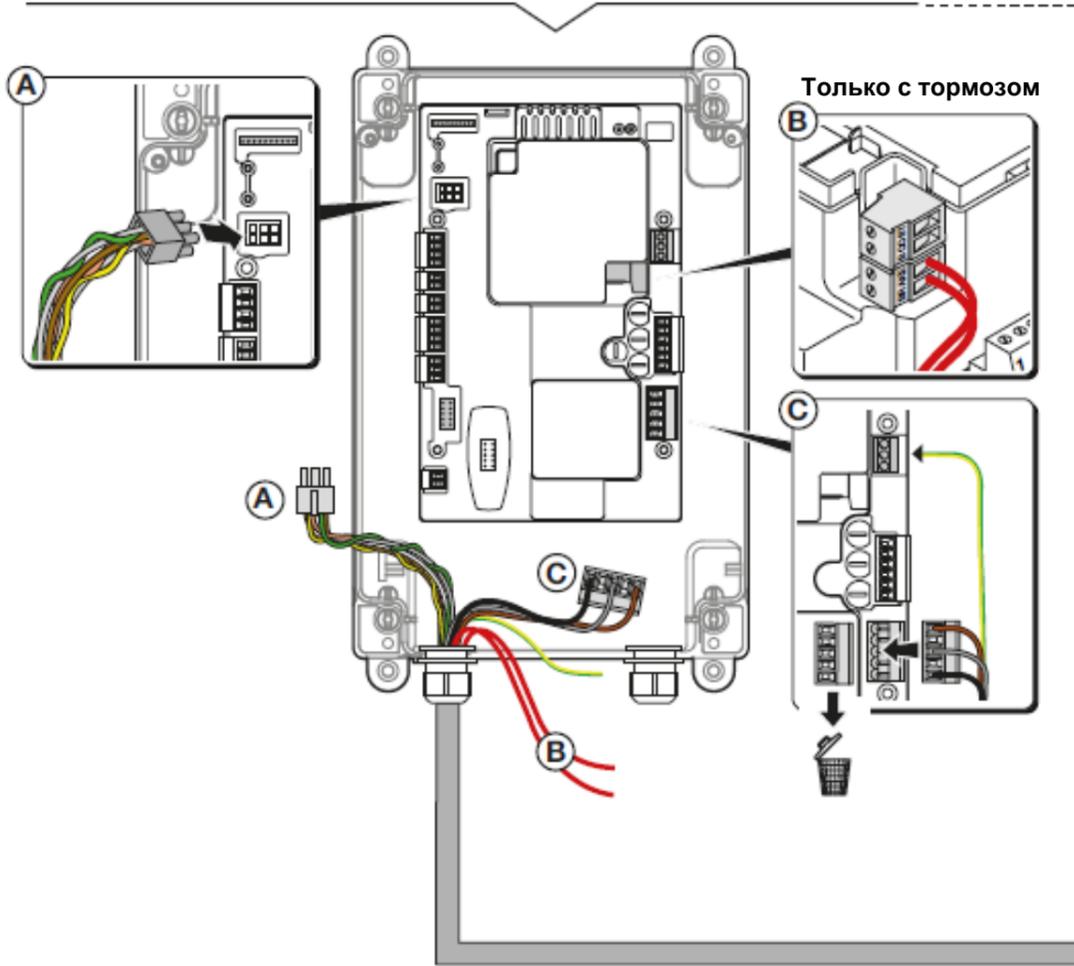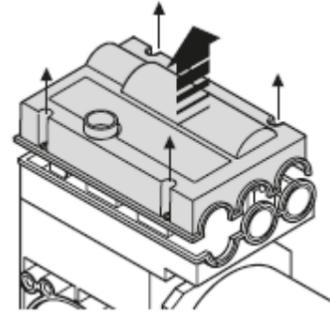



# D-PRO ACTION

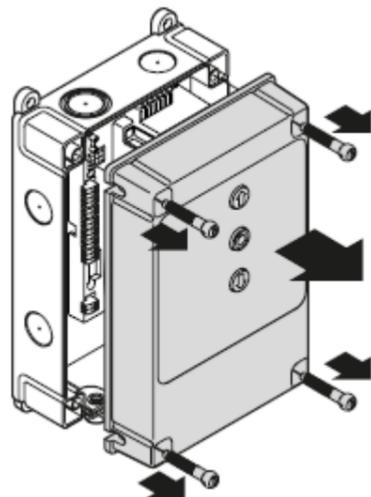

# SW

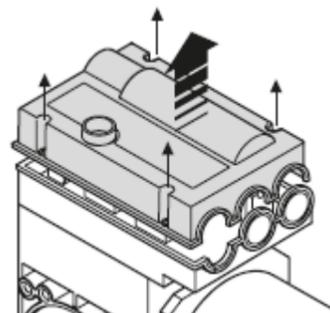


ОДНА ФАЗА ~ 230 В

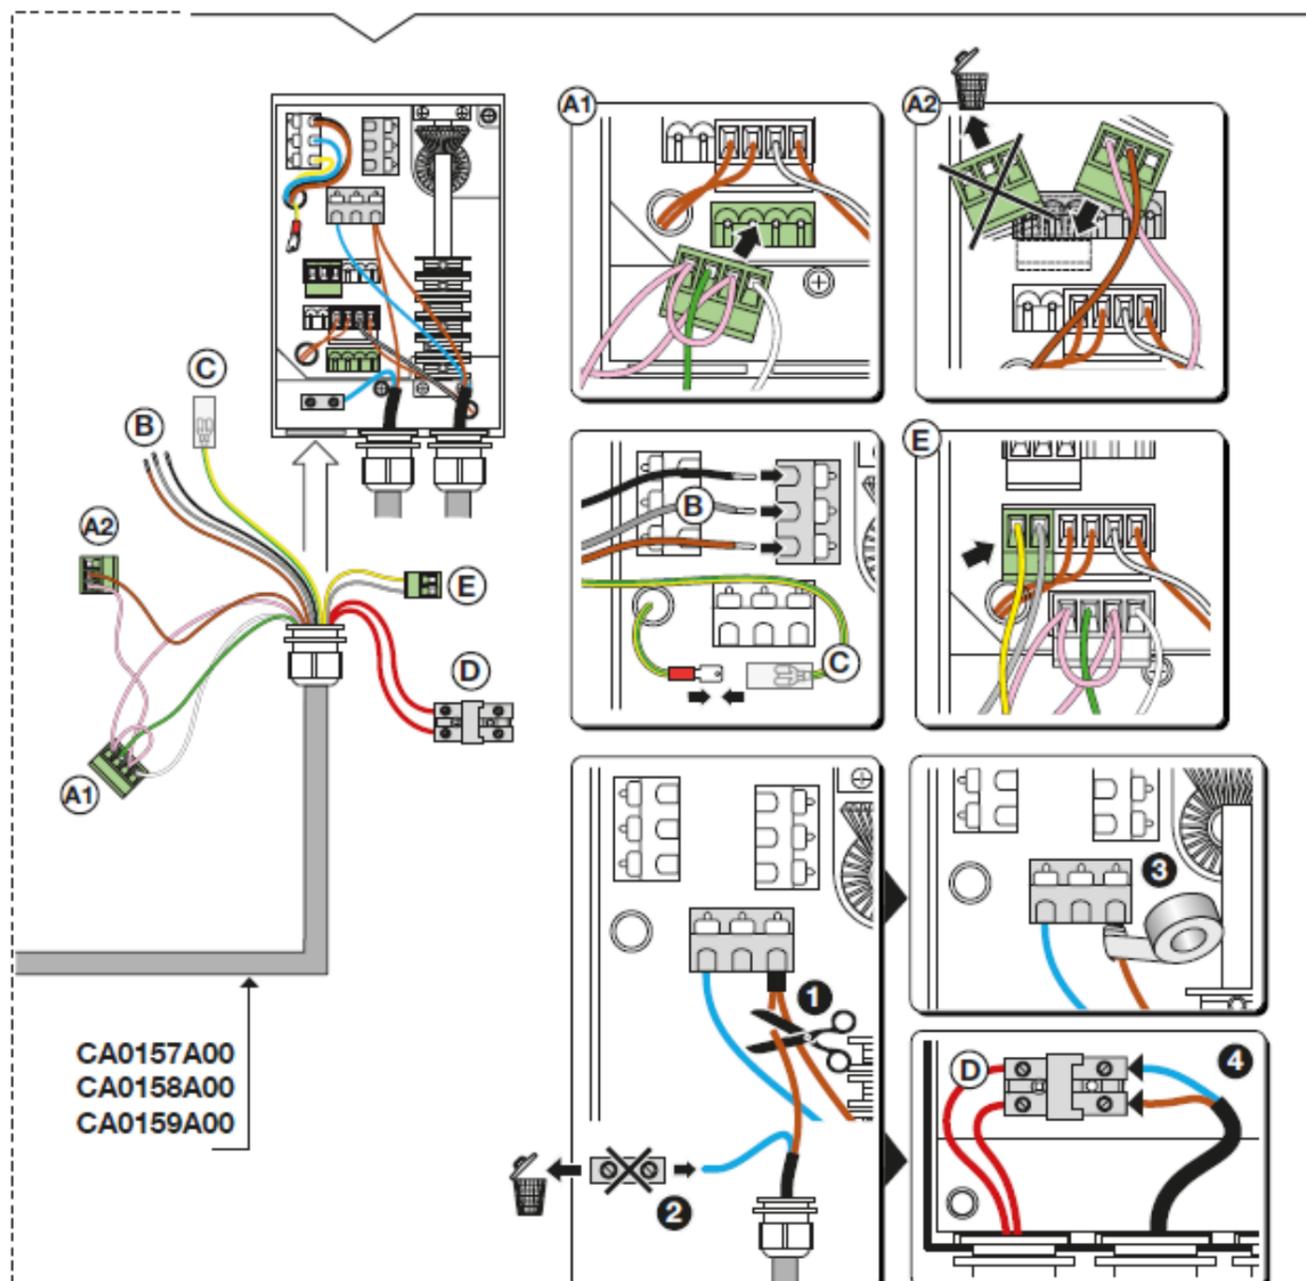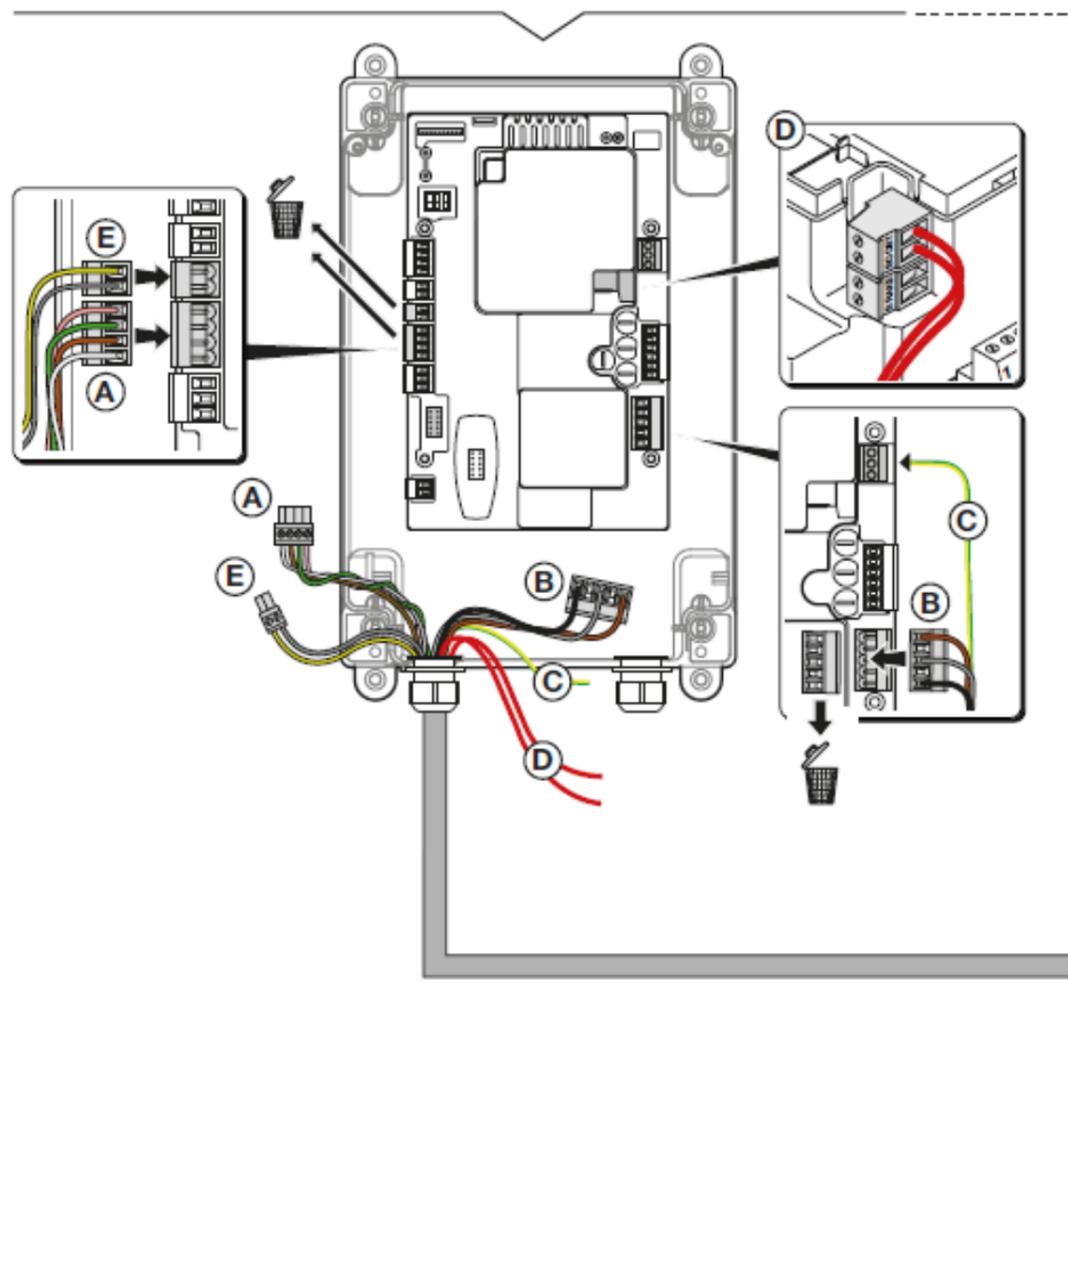




IS0506A00MM\_29-09-2016



### D-PRO ACTION

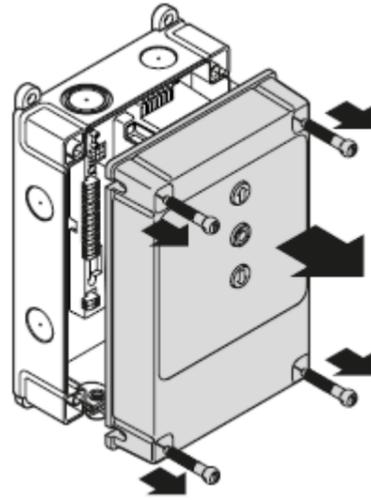


### SD - RD - RDF - HDF

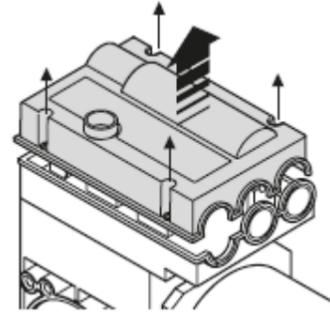

ТРИ ФАЗЫ  $3 \sim 400\text{ В}$   
 $3 \sim 230\text{ В}$

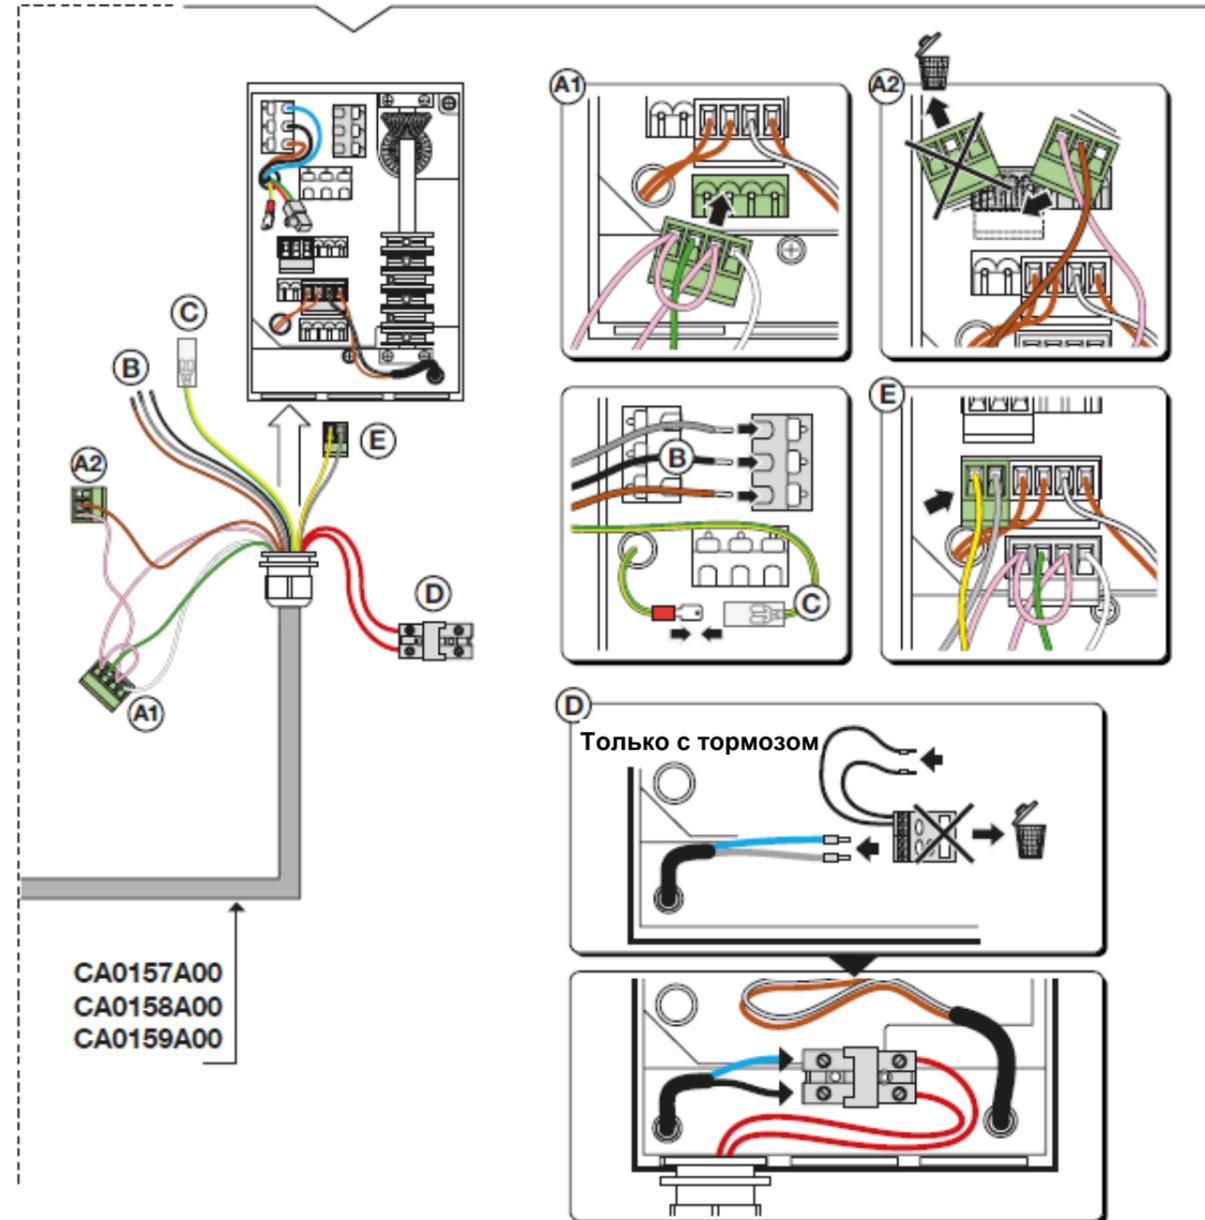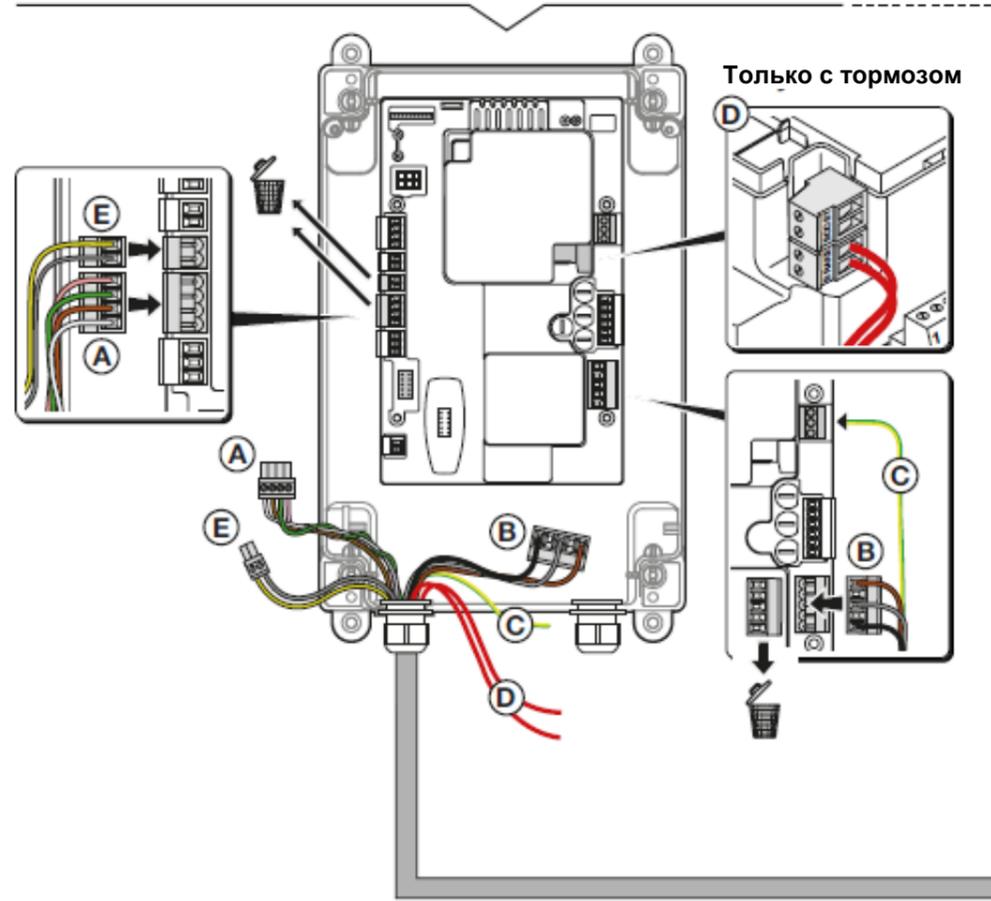


## D-PRO ACTION


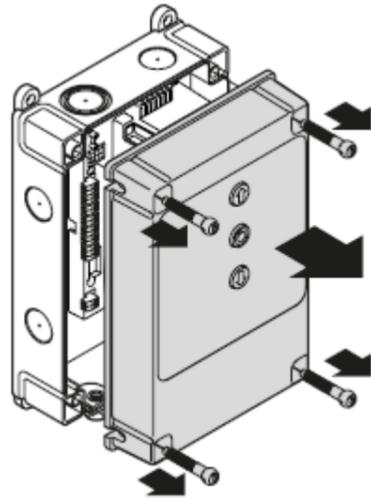


ОДНА ФАЗА ~ 230 В  
 ТРИ ФАЗЫ <sup>3</sup> ~ 400 В  
<sup>3</sup> ~ 230 В

## SWN -SDN -RDFN – RDN - HDFN

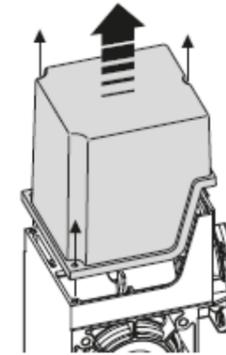


IS0506A00MM\_29-09-2016

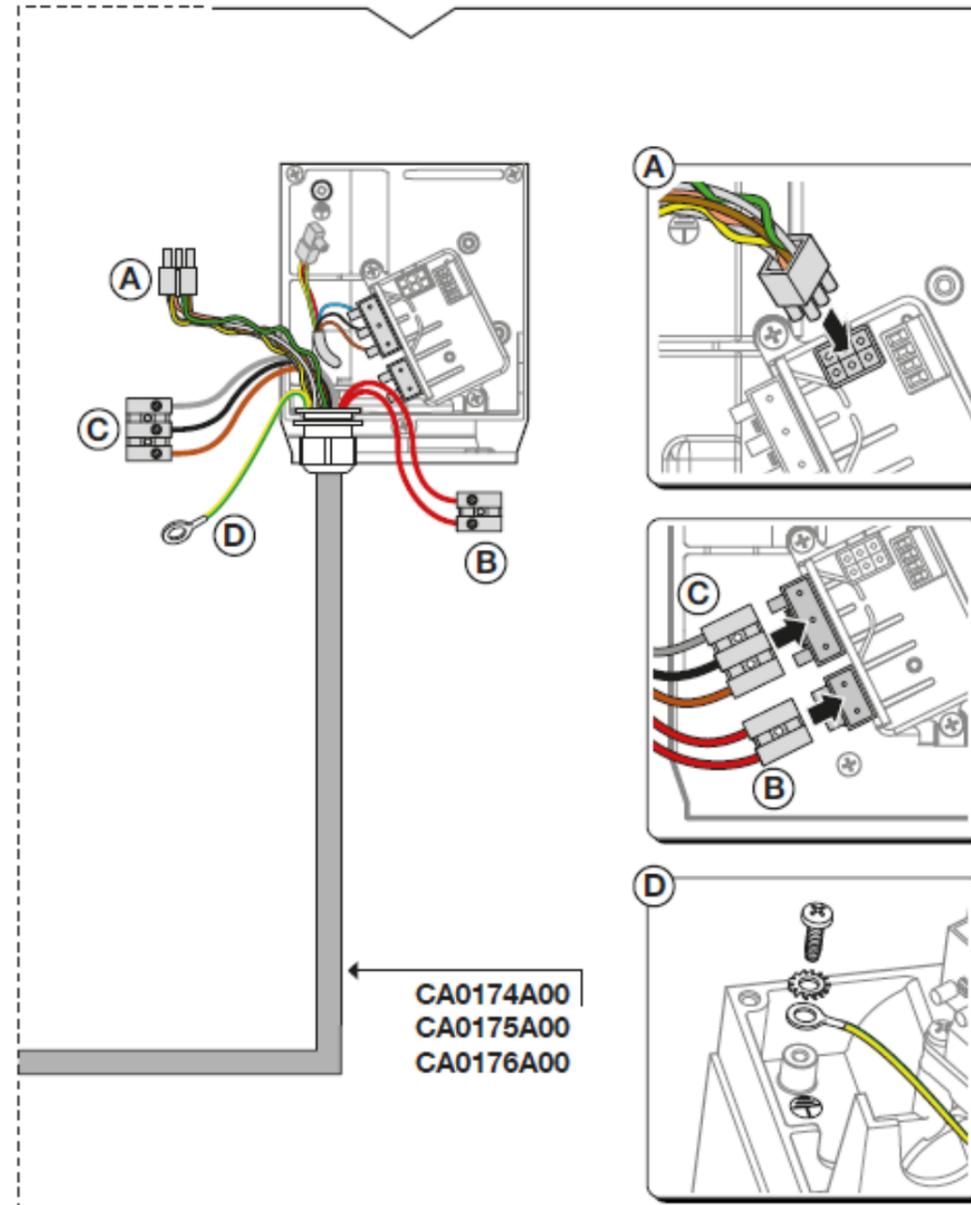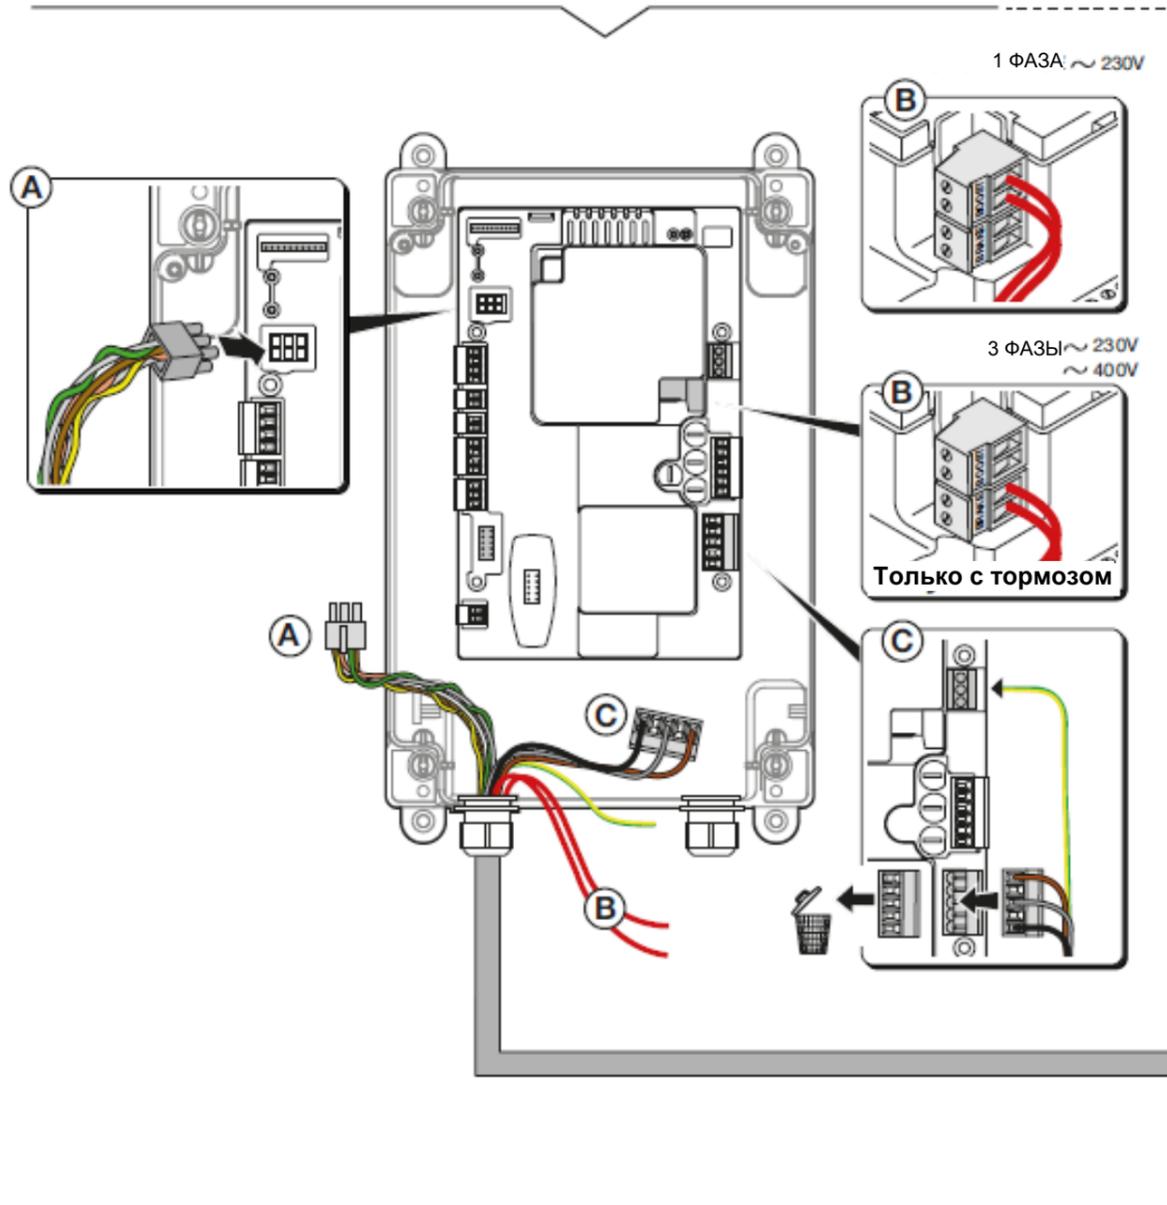







IS0506A00MM\_29-09-2016

### D-PRO ACTION

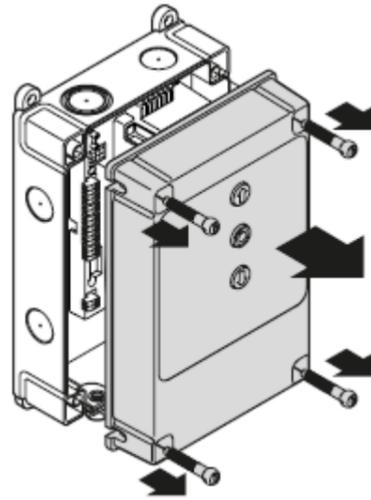

ТРИ ФАЗЫ  $3 \sim 400 \text{ В}$   
 $3 \sim 230 \text{ В}$

### RDFN - RDN - HDFN

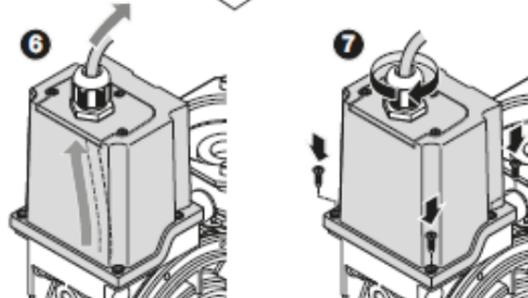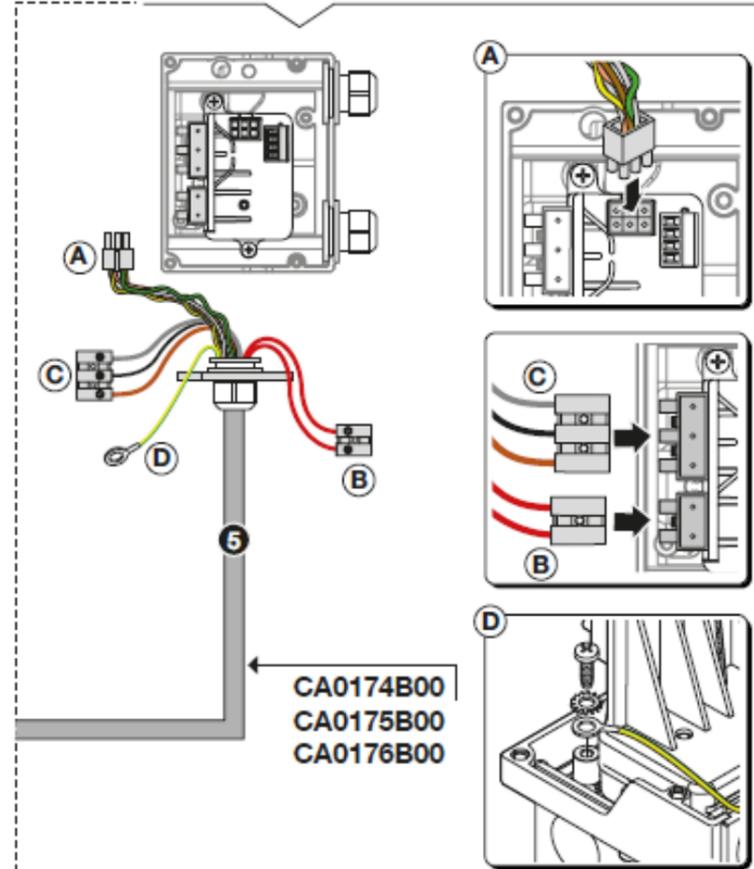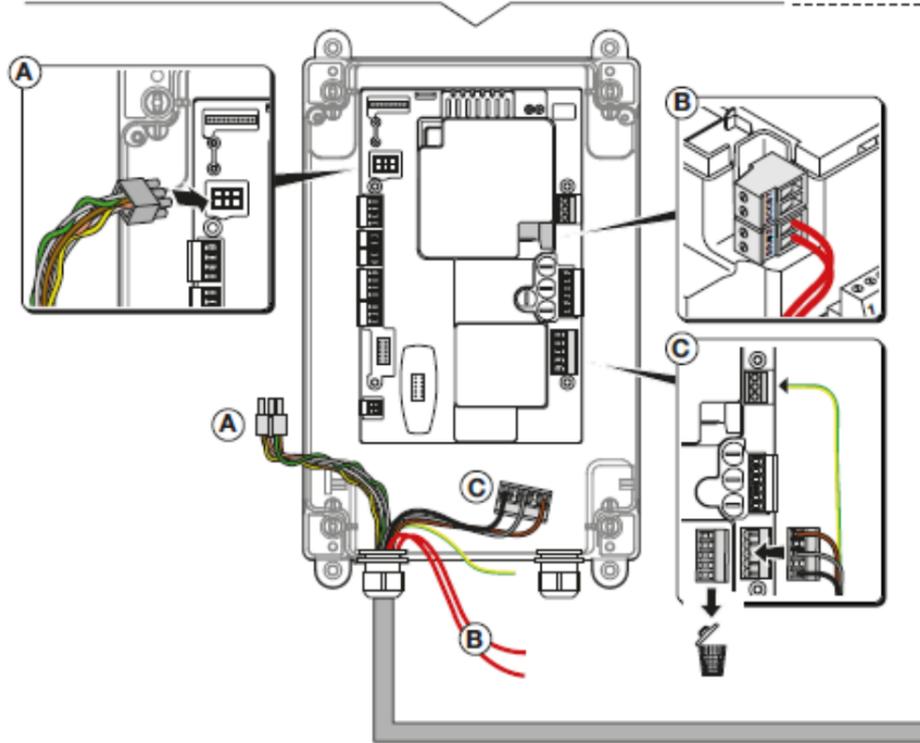
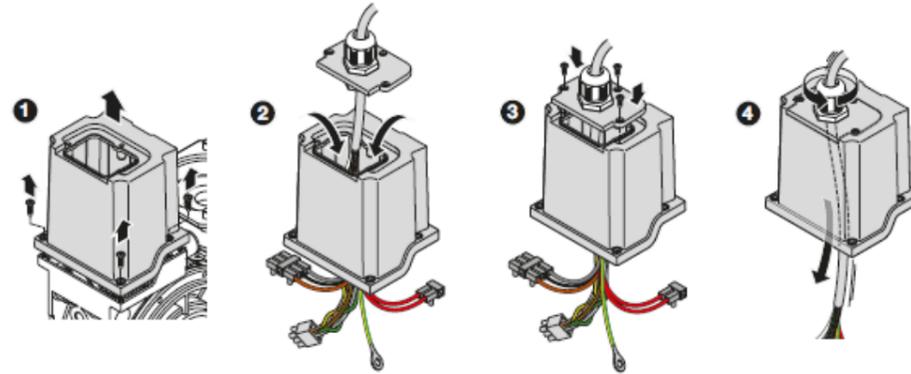


# D-PRO ACTION




# SWN -SDN -RDFN – RDN - HDFN



IS0506A00MM\_29-09-2016

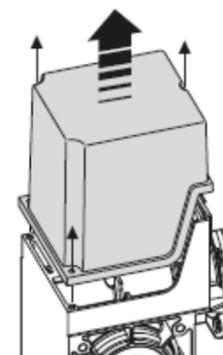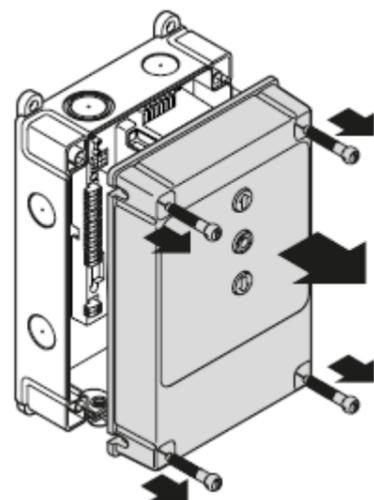

ОДНА ФАЗА ~ 230 В  
 ТРИ ФАЗЫ <sup>3</sup> ~ 400 В  
<sup>3</sup> ~ 230 В

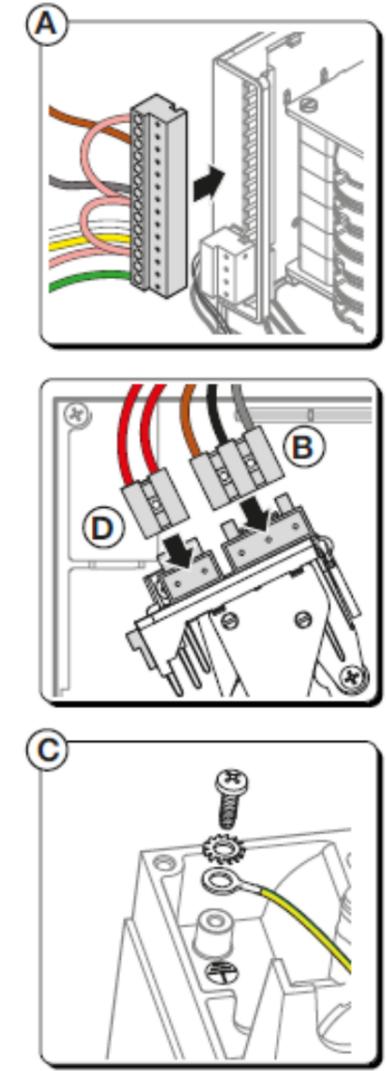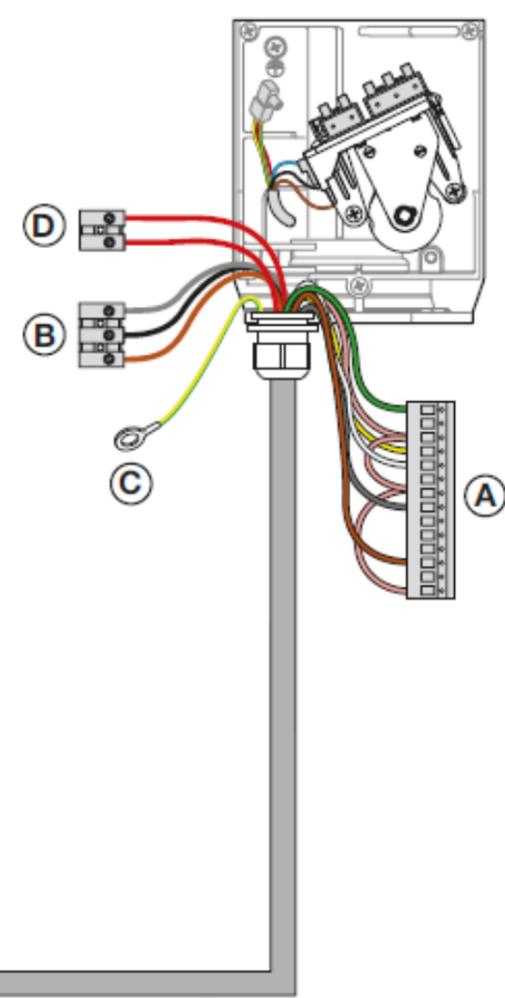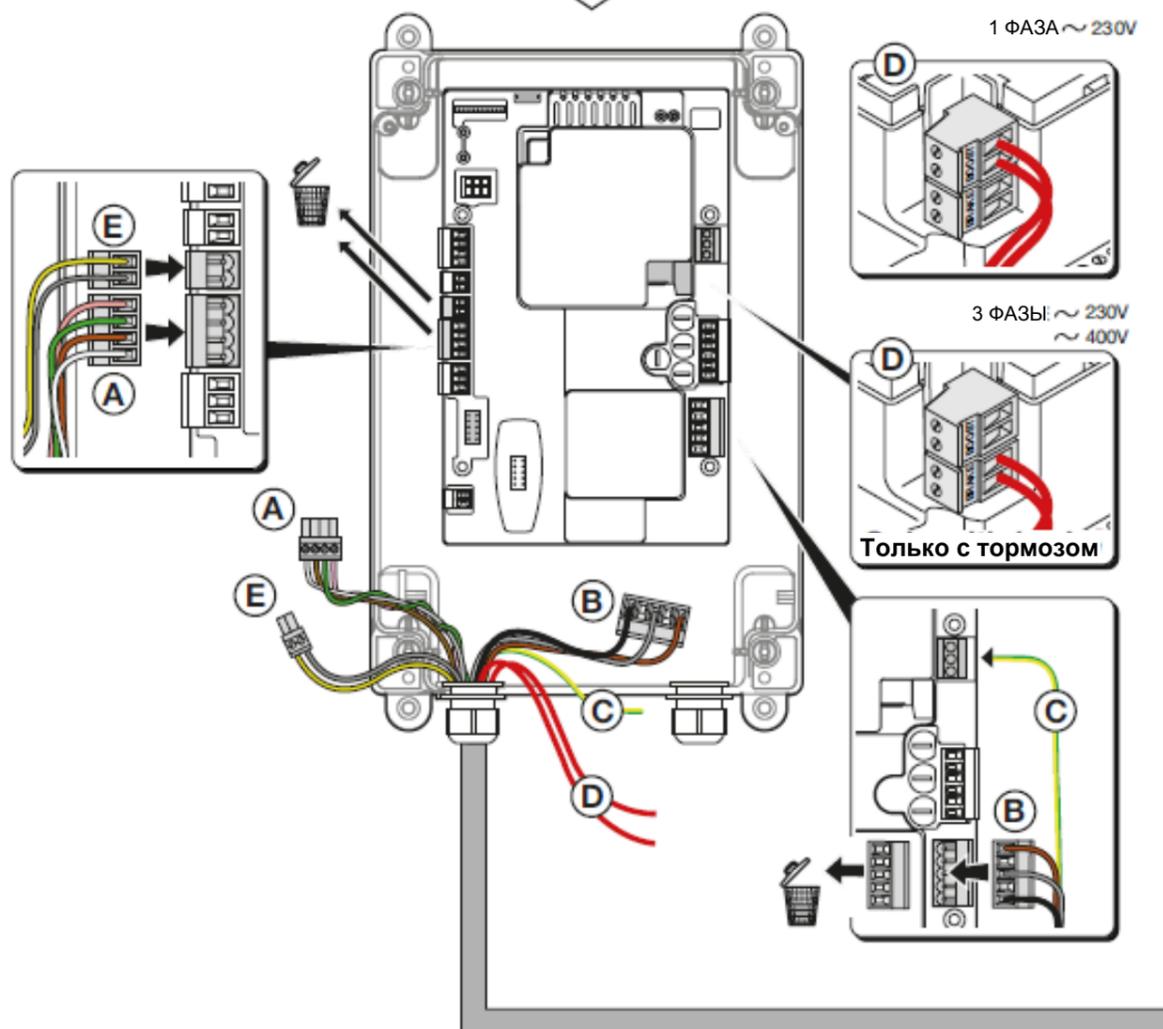


CA0177A00  
 CA0178A00  
 CA0179A00



IS0506A00MM\_29-09-2016

### D-PRO ACTION

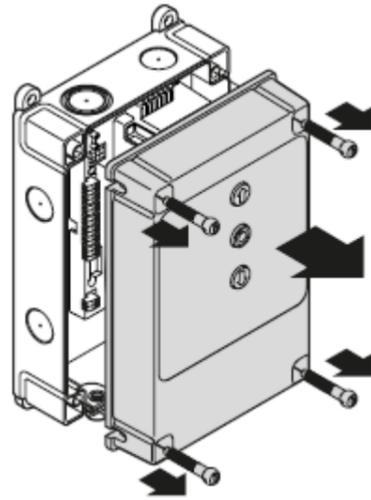

ТРИ ФАЗЫ  $3 \sim 400 \text{ В}$   
 $3 \sim 230 \text{ В}$

### RDFN - RDN - HDFN

